ASSEMBLY INSTRUCTION

Remove all items from the carton. Verify all pieces before assembly.

1

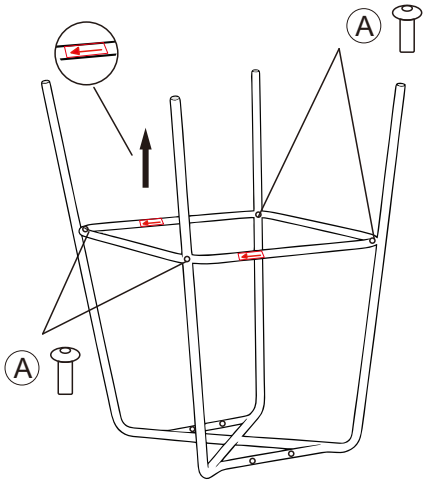

2

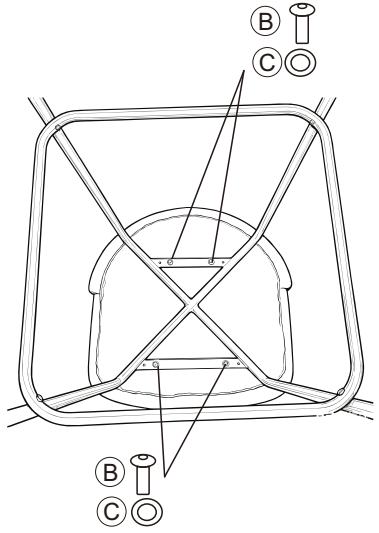

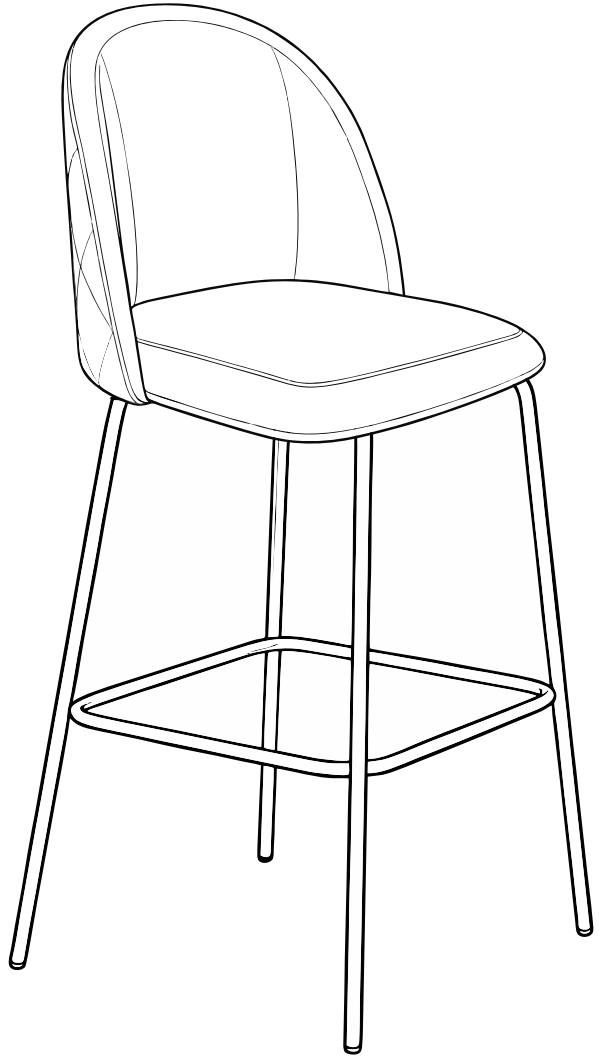

FINISH

① Seat and Back

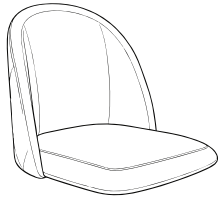

② Frame

③ Footrest

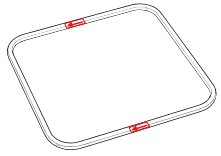

Accessories & Tools

Ⓐ	Ⓑ	Ⓒ	Ⓓ
M6*25mm-x4	M6*35mm-x4	x4	M6x1